

REGULAR MAINTENANCE	
Sweep, vacuum, damp mop	As needed to remove dust and light dirt.
Wood Soap	Add 3 cap (10ml) per 1 liter of warm water. Clean with a damp mop. Do not excess water on the floor (wring out mop). Let dry 30 minutes. <u>Frequency:</u> Ideally Every wash
Spray Revitalyser	Spray on floor. Rub along the lengths of the planks with a damp mop to work the Revitalyser into the floor. Let dry 30 minutes. Contains natural waxes soluble in water that enhance your pre-oiled floor. <u>Frequency:</u> Ideally Every four washes
Regenerating Oil	Use to repair wear and tear in your floor. Regenerates original lustre of the preoiled floor. If missing color, Impregnating Oil may be applied before use. Do not allow a film of oil to remain on the surface of the floor. <u>Use:</u> Scuff the area with 120 grit sandpaper. Apply with a motion parallel to wood flooring. Dry section with a clean cloth. <u>Frequency:</u> Commercial use: Once a year. Residential use: 2 to 10 years.
OTHER PRODUCTS AVAILABLE	
Stain remover	To remove heavy stains or glue during the installation. Use a cloth, rub the stain. Wipe and let dry.
Repair kit	Useful for minor repairs. Contains Impregnating Oil, Finishing Oil and wax pencil. <u>Note:</u> When using either oil – allow to penetrate for 10-15 minutes then wipe off excess oil. Apply Impregnating Oil when nicks or scratches remove the colour in the floor – let dry then apply Finishing Oil. For light, surface scratches apply Finishing Oil only. Always wait for complete drying (2-3 days) before judging the result. Never sand/re-sand the repair when the oils are not completely dry. If the repair requires further work sand lightly the area using 120 grit sandpaper. Apply Impregnating Oil. Let it dry then apply Finishing Oil. Let dry again.
Applicator	Useful to apply oil.
Replacement cover for applicator	To replace the cover of the applicator after use with oil.