

APPLICATION OF OILS
(Impregnating oil and finishing oil)



Gently sand in the directions of the strips with 120 grit sandpaper on a pole sander to open the wood pores




Vaccum the sanded surface to remove all residue



Saturate the wood uniformly with impregnating oil with your Intemporel applicator



Wipe off excess oil with your clean cotton cloth

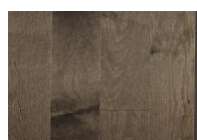

Let dry 24 hours



Apply finishing oil in the same manner as impregnating oil and let dry 24 hours

Always hang up your used covers and wipes to let them dry before throwing them in the garbage to avoid risk of combustion